


ABE 3 BEAMS ACTIVE PHOTOELECTRIC DETECTOR WITH DIGITAL FREQUENCY CONVERSION


INSTALLATION GUIDE

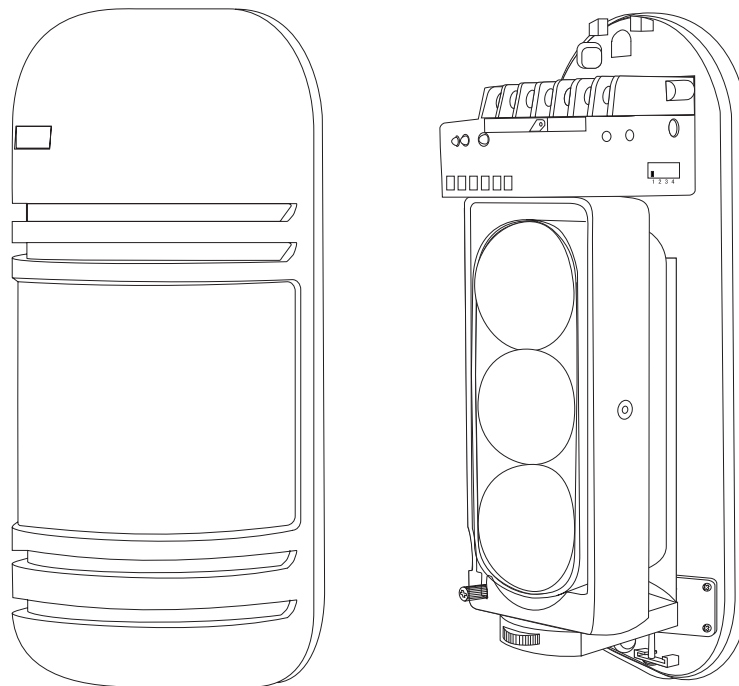


Model:

ABE-50	(Outdoor 50m, Indoor 150m)
ABE-75	(Outdoor 75m, Indoor 225m)
ABE-100	(Outdoor 100m, Indoor 300m)
ABE-125	(Outdoor 125m, Indoor 375m)
ABE-150	(Outdoor 150m, Indoor 450m)
ABE-180	(Outdoor 180m, Indoor 540m)
ABE-200	(Outdoor 200m, Indoor 600m)
ABE-250	(Outdoor 250m, Indoor 750m)

I. Part Name

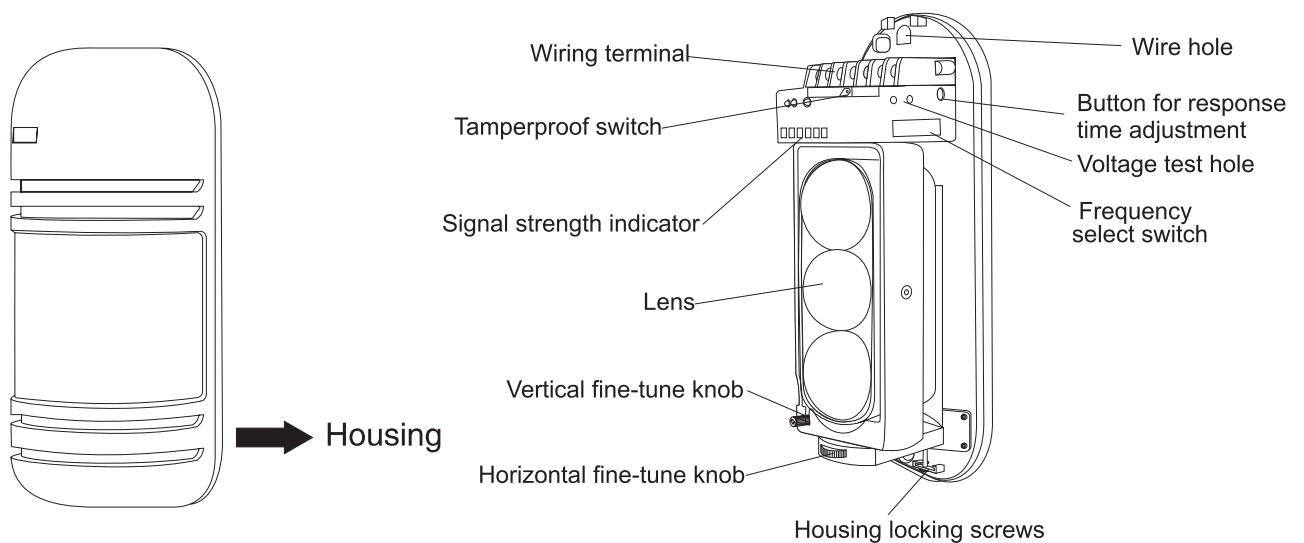





Signal strength receiving indicator. In the diagram, after adjustment of the beam, the level 5 shall light up. Otherwise, adjust again. It is strongly recommended that it should be adjusted to the point until level 7 or higher lights up.

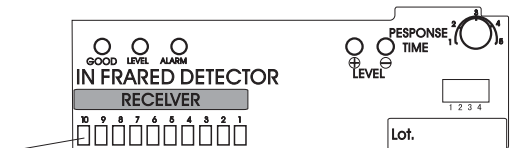


- Power transmit indicator
- LEVEL: Indicators turns on when the beam align presents. Specific alignment accuracy refer to signal strength receiving indicator.

- ALARM: The indicator turns on when alarm presents.
- GOOD: The green indicator turns on when the beam aligns with the receiver. If fails to align, the indicator will OFF.



II. Precautions for setting

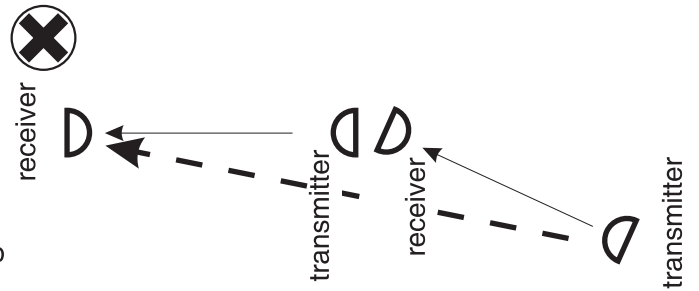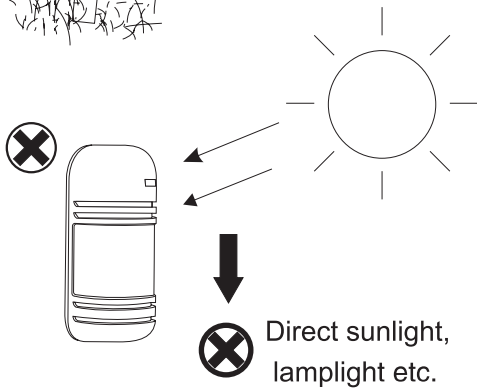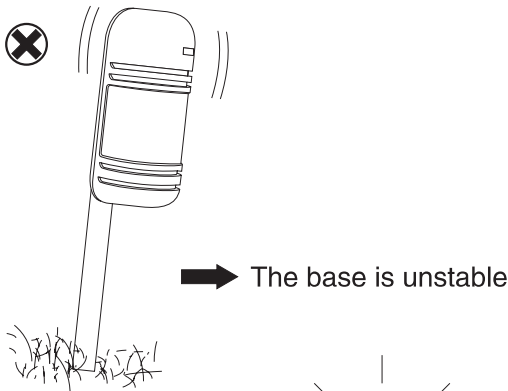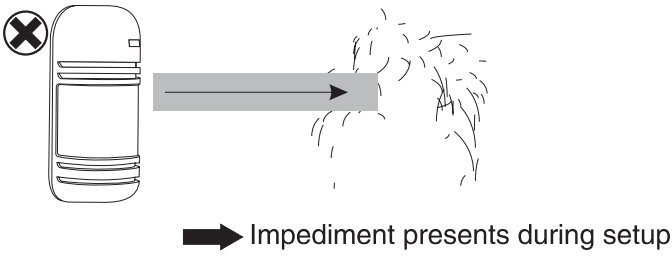

Multi sensors may be used for long-distance guarding. Please install according to the below diagram to avoid interference between beams.

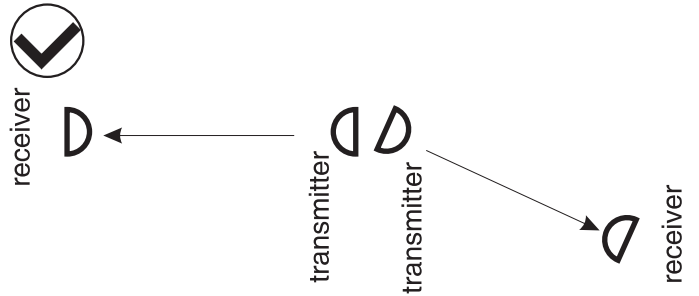


● Adjustable angle: horizontal $\pm 90^\circ$
vertical $\pm 10^\circ$

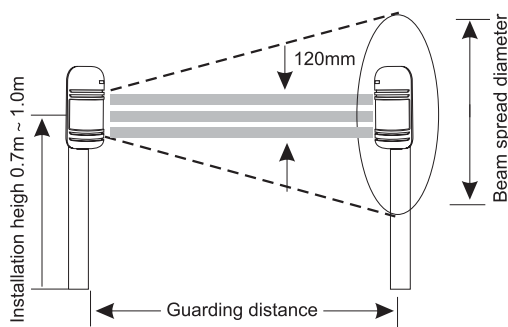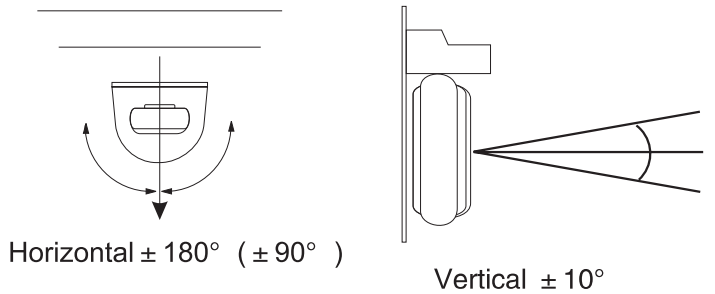


Style	Guarding distance	Beam spread diameter
ABE-50	50m	1.5m
ABE-75	75m	2.3m
ABE-100	100m	3.0m
ABE-125	125m	3.8m
ABE-150	150m	4.5m
ABE-180	180m	5.4m
ABE-200	200m	6.0m
ABE-250	250m	7.5m

III Setting procedure


1. Remove the cover

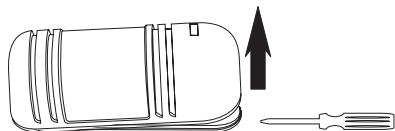


2. Attach the paper stencil onto the location where the equipment is to be mounted, and drill the holes in the positions on its mark.

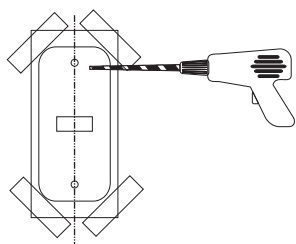




3. Put the cable through the hole for wiring.

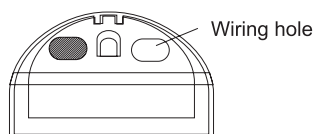

4. Fix the main body onto the wall

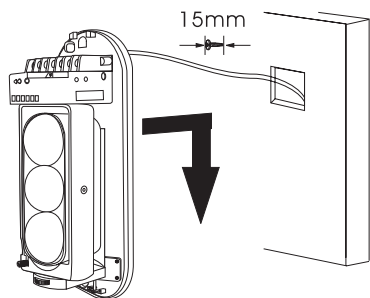


5. Connect the cable to the wire terminal.

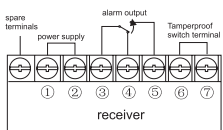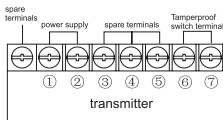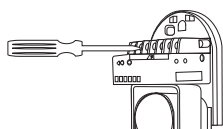

● Installation of fixed bracket


1. Drill a hole on the bracket and extend out the cable from it.

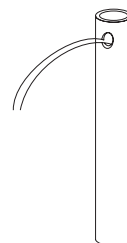


2. Remove the cover.



3. Fasten the base-plate to the bracket.

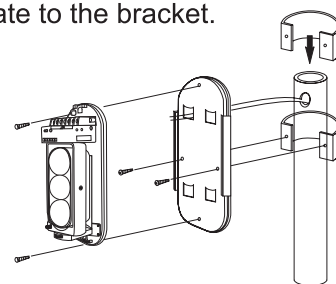

(Back-to-back installation guiding diagram)

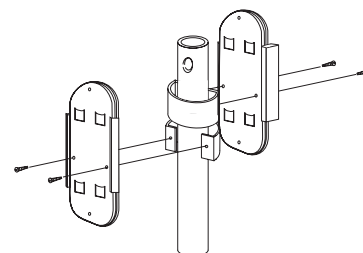

6. Put on the cover after adjusting the response time of the beam.


Wiring distance between transmitter and receiver

wire size	distance	voltage	
		DC13.8V	DC24V
0.5mm ² (φ 0.8)		300m	300m
0.75mm ² (φ 1.0)		400m	800m
1.25mm ² (φ 1.2)		700m	1400m
2.0mm ² (φ 1.6)		1000m	2000m


IVBeam alignment

Visual test method


1. Remove the cover and connect power.
2. Adjust the beam frequency of transmitter and receiver to the same channel.
3. Observe the collimation effect at a distance of 5cm from the viewfinder. Adjust the upper / lower angle regulation screw and horizontal adjustment wheel in order that the image of opposite detector falls into the central part of the viewing hole.
4. Adjust the vertical adjustment screw and the horizontal

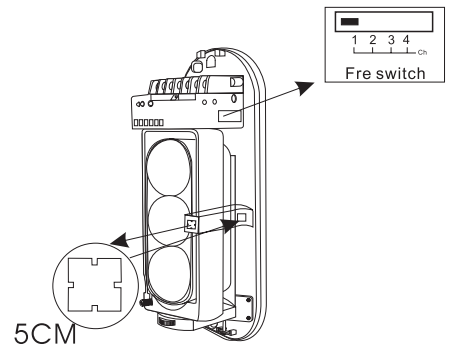

angle adjusting wheel, the signal strength indicator will light up step by step, adjust until level 5 or higher indicator lights up. If not, adjust it again.

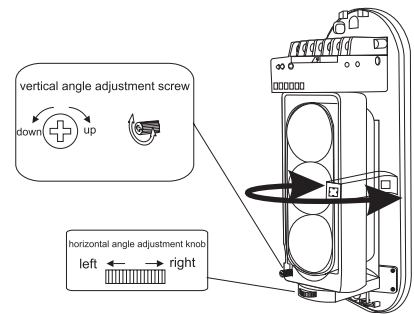

Note the more the signal strength indicator lights up, the higher the beam alignment is.

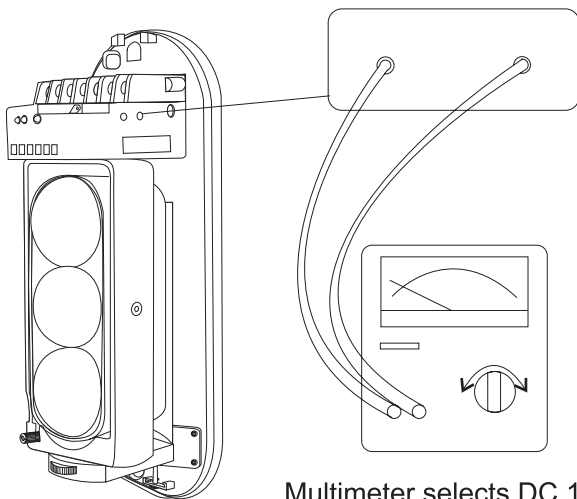


Voltage test method

1. Insert the test pen into the test hole (please note the +,- polarity)
2. First adjust the horizontal angle until the test hole voltage output maximize. Then adjust the vertical angle by the same way.


Note

In the diagram, after adjustment of the beam, the level 5 of the reception/transmission LED shall light up. Otherwise, adjust again. It is strongly recommended that it should be adjusted to the point until level 7 or higher lights up.

VBeam response time adjustment

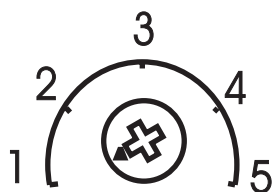

Please see the diagram to adjust the response time of the receiver. Usually, the time set shall be less than the time when the intruder crosses the guarding area.

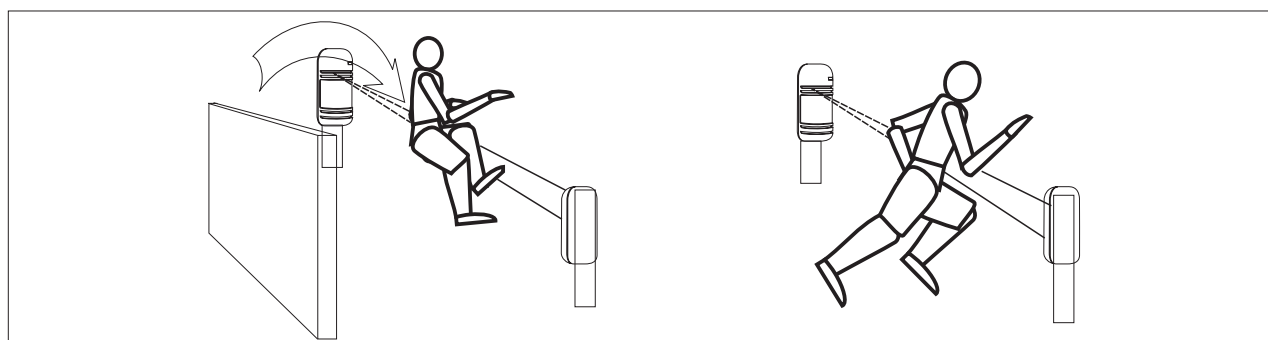


High speed:1

Fast running(6.9m/s):2

Fast walking(1.2m/s):3

Normal walking(0.7m/s):4

Slow walking(0.4m/s):5

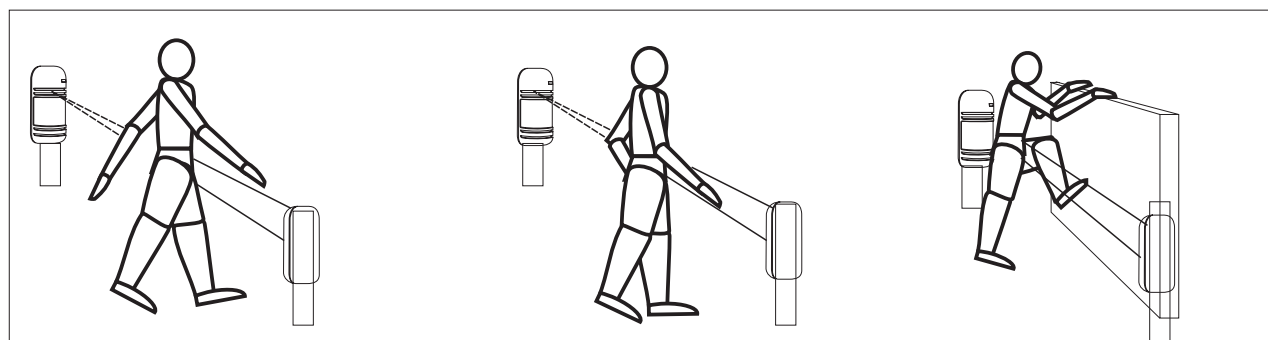

VIPhysical test

Walking test is required after the setting, physical test in accordance to below diagram.

	State	Signal
Transmitter	Transmitting	The 2 indicators of green LED light up
Receiver	Guarding	GOOD LEVEL indicators light up
	In alarm	The red ALARM indicator light up

VII. Trouble checking


Fault	Cause	Solution
The LED of the transmitter doesn't light up	Power failure (open circuit, short-circuit, etc.)	Check the power wiring
The LED of the receiver doesn't light up	Power failure (open circuit, short-circuit, etc.)	Check the power wiring
The LED of the receiver doesn't light up when the light is blocked	<ol style="list-style-type: none"> 1.By reflecting, or light from other sources enter the receiver 2.Both beams are not blocked at the same time 3.Response time is set too short 	<ol style="list-style-type: none"> 1.Remove the reflecting object or change the direction of beam 2. Block both beams at the same time 3.Prolong the response time
The receiver alarm indicator ON after the beam is blocked, but there is NO alarm signal output	<ol style="list-style-type: none"> 1.Broken circuit or short-circuit of the wiring 2.Poor contact 	<ol style="list-style-type: none"> 1.Check the wiring and contact 2.Connect the cable
The alarm indicator of the receiver is constantly ON.	<ol style="list-style-type: none"> 1.The beam doesn't match closely 2.There is obstacle presents between the transmitter and the receiver 3.The cover is polluted. 	<ol style="list-style-type: none"> 1.Re-adjust the beam 2.Remove the obstacle 3.Clear the cover
Intermittent alarm signal output	<ol style="list-style-type: none"> 1.Improper wiring 2.The supply voltage does not reach 13V or higher 3.The potential obstacle appears to block the beams due to the effect of wind and rain 4.The installation base unstable 5.The beam coincidence accuracy is inadequate 6.Beams blocked by other moving objects 7.Response time too short 8.Level 5 LED does not light up before the cover is put on 	<ol style="list-style-type: none"> 1.Check the wiring 2.Check the supply power 3.Remove the obstacle or change the location 4.Select a site with a stable base 5.Re-adjust the optical axis 6.Adjust the shade time or change the install location 7.Re-adjust the response time 8.Re-adjust the optical axis, and make the signal reception reaches its top.

VIII Technical parameters:

Model		ABE-50	ABE-75	ABE-100	ABE125	ABE-150	ABE-180	ABE-200	ABE-250
Alert distance	Outdoor	50m	75m	100m	125m	150m	180m	200m	250m
	Indoor	150m	225m	300m	375m	450m	540m	600m	750m
No. of beams		3 beams							
Detection mode		3 beams blocked simultaneous							
Optical source		Infrared digital pulse beam							
Response speed		50 ~ 700msec adjustable							
Alarm output		Relay contact output: NO. NC contact rating: AC/DC30V 0.5Amax							
Power supply		DC13.8 ~ 24V AC11 ~ 18V P ≥ 15W							
Power consumption		70mAmax		80mAmax		90mAmax		100mAmax	
Operation temperature & humidity		-25℃~55℃ 5%~95%RH(relative humidity)							
Dimensions		Refer to its diagram							
Tamper output		Contact output: NC contact rating DC24V 0.5Amax							
Optical axis adjustment(H)		± 180° (± 90°)							
Optical axis adjustment(V)		20° (± 10°)							
Viewfinder		Detachable							
Protection against dew, frost		Calefaction housing (optional)							
Material		PC resin							
Net weight		1250g(receiver +transmitter)							
Gross		2168g							

IX. Recommended installation guide & physical appearance and dimension

Recommended installation

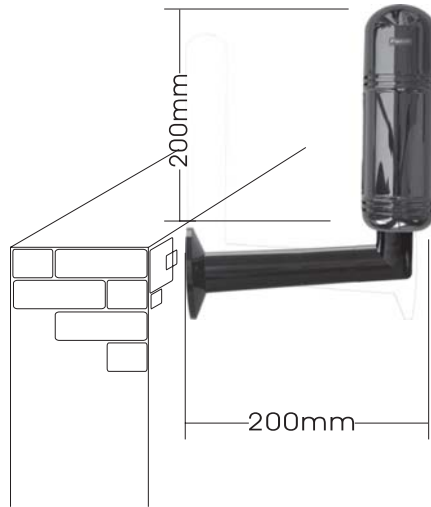

Installation bracket



T-shaped bracket
T-100
100 × 120mm
T-200
200 × 120mm

L-shaped bracket
80 × 75mm

I-shaped bracket
I-100
100mm
I-200
200mm



Physical appearance & dimension

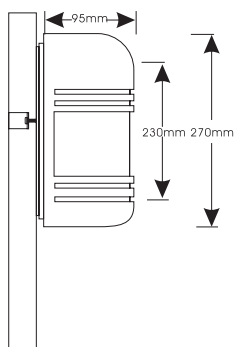

The product has got the 3C and CE approval already and is now applying for the UL approval.